



 
Front View

**Congratulations on the purchase of ViewCast Media Platform (VMp) Live.**

The following steps in this *Quick Start Guide* will help you set up VMp Live so you can begin scheduling and automating encoding events as quickly as possible. The VMp Live web interface allows quick and easy access to its operational features. Refer to the *User Guide* on the included CD for more detailed instructions.

Complete the following steps to begin operating VMp Live:


## 1. Connect to an electrical power source

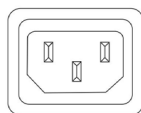

**AC power connector for 100-240 volts, AC, 50-60 Hz** **B**


Plug the power cable that was included with your VMp server into this connector and plug the opposite end into an AC power source.
 
## 2. Connect to an IP network

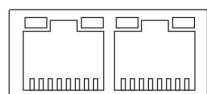

**RJ-45 Ethernet connector** **A**

The VMp server provides two network connections. Use either the primary or secondary jack to connect to your IP network.

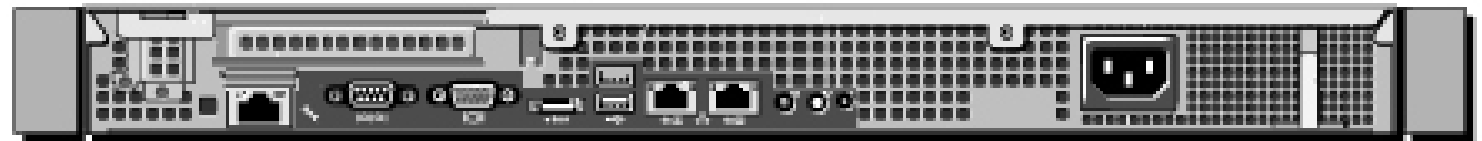

**A**

Back Panel

**B**


## 3. Log on to VMp Live

Complete the following steps to log on to VMp Live:

- 1) Press **Power** on the front panel to start the VMp Live server. When the system completes the boot-up process, a login screen displays.
- 2) Click **viewcast**.
- 3) Enter **viewcast123** as the password.
- 4) Press **Enter** or click **Log In**. The desktop window displays.
- 5) Start a web browser such as Microsoft® Internet Explorer 7.0 or higher, Mozilla Firefox 3.0 or higher, or Safari 3.2 or higher.
- 6) Enter the address of your VMp Live server in the address bar. The address will be:  
**<http://localhost/vmp/ui>**


**NOTE: Adobe® Flash® Player 10.1 or later must be installed in the browser. When you first open the application, you will be prompted to update your Flash Player version if necessary.**

- 7) After you download the Flash Player, re-enter localhost address in the address bar. The VMp Live Welcome window displays.

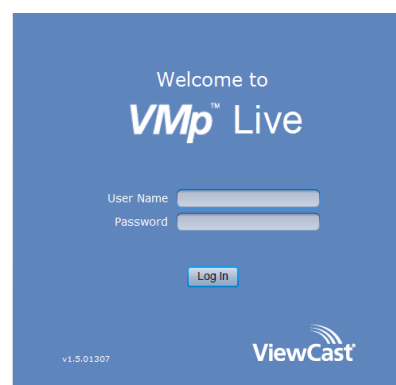

- 8) Click in the **User Name** field and enter **vmpadmin** as the user name. Click in the **Password** field and enter **viewcast** as the password.

- 9) Then, click **Login** or press **Enter**. The VMp Live main window displays.

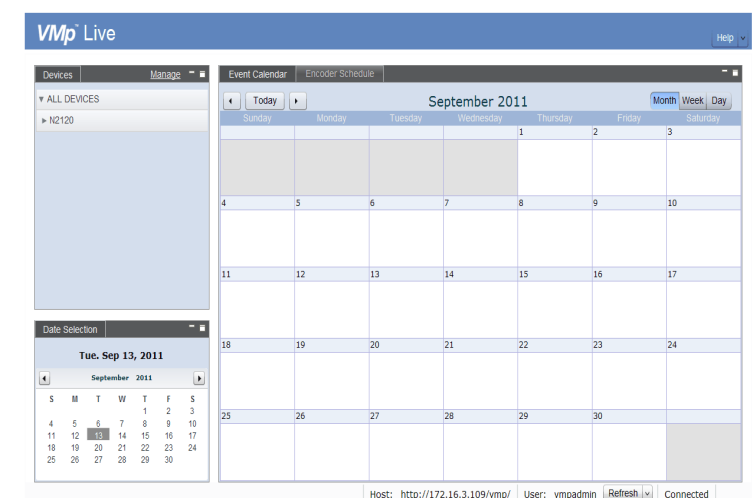

- 10) Access the VMp Live user guide included on the product CD or click on the Help link in the upper-right corner for instructions on scheduling and managing your encoders.

**NOTE: To access the application from a remote computer, refer to the user guide for instructions.**